

GARMIN®

ARX70



 

 


INSTRUCTIONS

Remote Overview

⚠ WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.




	Radio sources: Press to tune to the previous station. Other sources: Press to skip to the beginning of the track or to the previous track.
	Radio sources: Press to tune to the next station. Other sources: Press to skip to the next track.
	Press to decrease the volume. Hold to quickly decrease the volume.
	Press to increase the volume. Hold to quickly increase the volume.
	Press both keys to enter zone selection mode (Selecting a Zone, page 3).
	Press to cycle through the available sources. Hold to pair with a stereo (Connecting the ARX70 Remote to a Stereo, page 2).
	Radio sources: Press to mute or un-mute. Other sources: Press to pause or resume.

Status LEDs

Green short blink	Transmission successful
Green long blink	Pairing or zone selection successful
Green flashing	In zone selection mode
Green and red flashing	In pairing mode
Red short blink	Transmission failed
Red long blink	Pairing or zone selection failed
Orange flashing	Attempting to transmit; check the stereo

Connecting the ARX70 Remote to a Stereo

For a list of compatible stereos, go to support.garmin.com.

- 1 Bring the ARX70 remote within 10 m (33 ft.) of the compatible stereo.
NOTE: Stay 10 m (33 ft.) away from other ANT[®] devices while pairing.
- 2 Place the stereo into Bluetooth[®] discoverable mode.
For detailed information, see the stereo owner's manual at support.garmin.com.
- 3 On the ARX70 remote, press and hold  until the status LED starts alternating green and red.
The remote searches for the stereo. When the remote pairs successfully, the status LED turns on green briefly and then turns off.

If the remote cannot find the stereo, the status LED turns on red briefly and then turns off.

Mounting Considerations

NOTICE

Selecting the correct mounting location is critical to optimize the performance of the remote control.

- You must mount the remote control in a location that is within 10 m (33 ft.) of the stereo.
- You must mount the remote control in a location where it is not submerged.
- If you need to mount the remote control outside the boat, you should mount it in a location where it will not be damaged by docks, pilings, or other pieces of equipment.
- You should select a flat mounting surface for the best results.
- The mounting surface must be free of dirt, debris, wax, or coatings.
- Do not mount the remote control higher than 2 m (6.5 ft.).
- After you select the location, hold the remote control in the selected location, press a few buttons, and confirm the operation on the stereo.
- Move away from sources that can interfere with the remote control's operation. Sources of interference may include strong electromagnetic fields, some 2.4 GHz wireless sensors, high-voltage power lines, electric motors, ovens, microwave ovens, 2.4 GHz cordless phones, and wireless LAN access points.

Mounting the Remote Control

Before mounting the remote control, you must connect it to the stereo ([Connecting the ARX70 Remote to a Stereo, page 2](#)).

- 1 Select an appropriate location for the remote control ([Mounting Considerations, page 2](#)).
- 2 Thoroughly clean and dry the mounting surface using a mixture of water and isopropyl alcohol.
The mounting surface must be free of dirt, debris, wax, or coatings.
- 3 Test the range at the selected location by holding the remote at the location, pressing a few buttons, and confirming the operation on the connected stereo.
- 4 Remove the backing from the adhesive on the back of the mount.
- 5 Carefully orient the remote control and mount with the Fusion® logo at the bottom.

NOTICE

Before placing the adhesive on the mounting surface, make sure the location and orientation are correct. It is extremely difficult to remove the adhesive. Some mounting surfaces might be damaged after removing the adhesive.

- 6 Press the remote control firmly onto the mounting surface, maintaining pressure for at least 60 seconds.
- 7 Allow the remote control to sit at room temperature for 72 hours.

TIP: To remove the remote control from the mount, gently press the remote control and rotate a quarter-turn.

Selecting a Zone







On compatible stereos, you can use the ARX70 remote control to select a zone and change the volume of the zone. Some stereos require a software update to enable this functionality of the remote.

NOTE: When you connect to a stereo, all zones are selected by default.


- 1 Press  and  to enter zone selection mode.

The status LED begins flashing green.


- 2 Press a button to make a selection:

- Press  for zone 1.
- Press  for zone 2.
- Press  for zone 3.
- Press  for zone 4.
- Press  for all zones.
- Press  to cancel the zone selection.

When a zone is selected successfully, the status LED turns on green briefly and then turns off. When zone selection fails, times out, or is canceled, the status LED turns on red briefly and then turns off.

NOTE: When you select an inactive or invalid zone, the remote still functions but does not control the volume. You can select  to select all zones.

Remote Specifications

Weight	With mount: 30 g (1.6 oz.) Without mount: 25 g (0.88 oz.)
Operating temperature range	From 0° to 50°C (from 32° to 122°F)
Storage temperature range	From -20° to 70°C (from -4° to 158°F)
Radio frequency/protocol	2.4 GHz @ 6.42 dBm nominal
ANT wireless range	Up to 10 m (33 ft.)
Compass-safe distance	5 cm
Water rating	IEC 60529 IPX6 and IPX7 ¹
Battery type	Non-user-replaceable CR2032 (3 V)  WARNING Do not remove or attempt to remove the non-user-replaceable battery.

Troubleshooting

The remote will not connect to the stereo

- Make sure the stereo is in Bluetooth discoverable mode.
- Move closer to the stereo, and attempt to connect to it again ([Connecting the ARX70 Remote to a Stereo, page 2](#)).
- Disable Bluetooth discoverable mode on the stereo, and then re-enable it.

The LED is only red or orange when I press a button

- Move closer to the stereo, and attempt to connect to it again ([Connecting the ARX70 Remote to a Stereo, page 2](#)).
- Before mounting, make sure you have selected an optimal location for the remote ([Mounting Considerations, page 2](#)).

The remote does not change the volume, but other functionality works

An invalid zone is selected. Select a zone valid for the stereo ([Selecting a Zone, page 3](#)).

© 2024 Garmin Ltd. or its subsidiaries

Garmin®, the Garmin logo, ANT®, and Fusion® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. These trademarks may not be used without the express permission of Garmin.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin is under license.

IC: 1792A-03344 M/N: A03344. 2.4 GHz @ 6.42 dBm nominal. 0° to 50°C (from 32° to 122°F)

¹ Withstands incidental exposure to water of up to 1 m for up to 30 min. and is protected against powerful jets of water. For more information go to [garmin.com/waterrating](https://www.garmin.com/waterrating).